 


Getting to know MyPearl

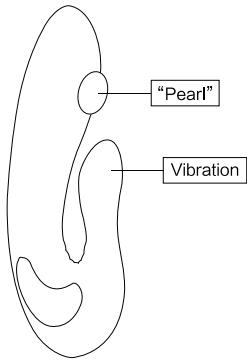

Features

- Stylish and innovative design
- Jacking motion of the “pearl” against the G spot
- Two motors for stimulating the clitoris and G spot
- 10 “pearl” functions and 10 vibration modes
- Both functions can be separately controlled
- Splashproof (IPX6)
- Rechargeable, USB charging cable included

Operation

1. Charging


Please fully charge for around 100 minutes before first use.
LED flashes white: charging
LED lights white: fully charged

2. Use


Please unlock MyPearl before usage.
Travel lock:
Please press and hold both buttons for 3 seconds, until the two buttons flash in red. Please repeat the same operation when the product is switched off to lock it.
Start Vibration:
Press and hold the button for 2 seconds to start the vibration. Shortly click the same button to cycle through 10 vibration modes (3 continuous speed levels and 7 different patterns).
To turn off the vibration motor, please press and hold the button for 2 seconds.
Start Pearl motion:
Press and hold the button for 2 seconds to start the “pearl” function. Shortly click the same button to cycle through 10 “pearl” functions (3 speed levels and 7 motions patterns).
To turn off the “pearl” motion, please press and hold the button for 2 seconds.
After turning off, the “pearl” will stop automatically at the lowest position.

How it works

- For a better experience, apply some water based lubricant on both arms.

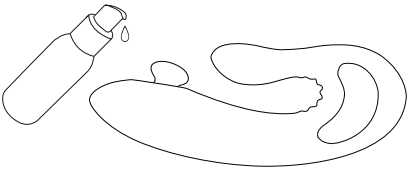


- To use, insert the long arm into your vagina, the clit arm lays against the clitoris. Turn it on as described above and play around with the position and settings until you find your spot – enjoy!

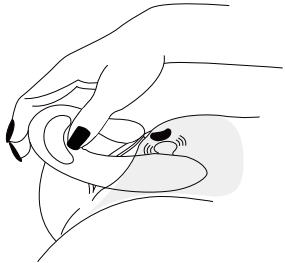


How to clean

- To start, first remove the pearl from the toy by gently pulling on it until it is removed.

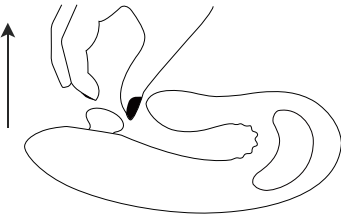

- Once the pearl is removed, gently wash with a toy cleaner or a soapy solution. Rinse under water until the toy cleaner or soapy solution is gone.

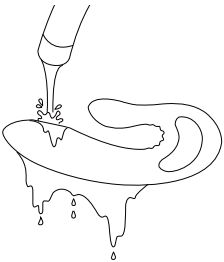

- Keep it afterwards in a dry and cool place.
- Once dry, gently push the pearl back into its position on the toy.

Specification


- **Material:** Body–safe silicone and ABS with smooth surface
- **Size:** 160mm x 32mm, insertable length: 103mm
- **Modes:** 10 pearl motions, 10 vibration modes
- **Operation time:** 100 minutes
- **Charging time:** 100 minutes

Guarantee

The product is guaranteed for 1 year from the date of purchase. If you experience problems, please contact the vendor you bought the product from.

中文

爱珠手指顶顶棒

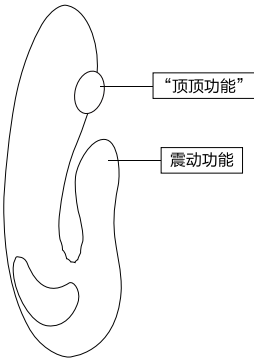

特点

- 精美创新的外形设计
- 棒身上独特的“爱珠”设计结合创新的顶起顶落的运动设计，能够深层刺激G点
- 两个马达分别刺激阴蒂和G点
- 10种顶顶模式和10种震动模式
- 两个马达单独控制
- IPX6级防水
- 可充电设计（USB 充电线包含在内）

操作方法

1. 充电

 
首次使用前请充电100分钟
LED灯闪烁白灯：充电中
LED灯长亮白色：充电完成

2. 开始使用


使用前，请确保产品已解锁
旅行锁：
两个按键同时长按三秒，即可开启旅行锁，LED灯上下快速闪烁表示旅行锁开启；
两个按键同时长按三秒，即可关闭旅行锁，LED灯上下缓慢闪烁表示旅行锁关闭；
震动键：
长按两秒震动键 , 即可进入震动第一段，亮灯；短按进入第二段，第十段过后再按倒回第一段，以此循环；共十段（前三段变速，后七段变频）；在任何一段长按两秒即可关机，灯灭后表示已关机。（长按两秒震动键 , 灯亮，即可进入第一阶段震动模式；短按进入第二阶段，以此类推，到达第十段后再按可回到第一段，以此循环；共十段（前三段变速，后七段变频）；在任何一段长按两秒即可关机且灯灭）
凸点键：
长按两秒凸点键 , 即可进入顶顶功能的第一段，亮灯，再按进入第二段，第十段过后再按倒回第一段，以此循环；产品共有十个模式阶段（前三段变速，后七段变频）；在任何一段长按两秒即可关机且灯灭。关机后顶起的“爱珠”会缓缓复位到原始位置。

3. 如何使用

- 为了更好的体验产品，可以在使用前涂抹适量的水溶性润滑液在产品上

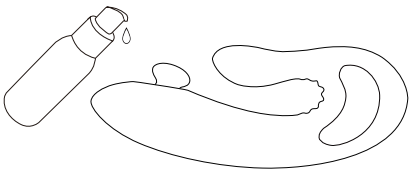


 - 使用时，请将母棒插入到阴道，子棒覆盖在阴蒂上。开机后选择你喜欢的模式和强度后，按照上面的姿势，调整至最舒适的状态后开始尽情享受产品带来的愉悦。）

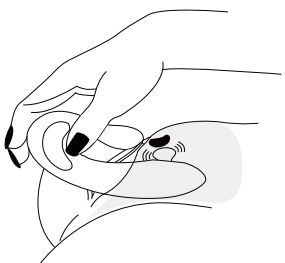

4. 如何清洗

 - 开始前，将“爱珠”轻轻抬高棒身，如图所示

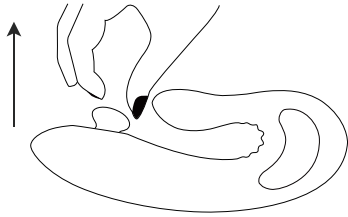

- 请用水或者肥皂清洗该产品，然后再用玩具清洁喷雾喷洒在产品表面将产品仔细清洗。



- 请将其放在阴凉处自然晾干
- 最后再将产品的“爱珠”按下恢复出厂时的位置即可

规格

- **材质：**硅胶、ABS
- **尺寸：**160mm x 32mm, 插入尺寸： 103mm
- **模式：**10种顶顶模式，10种震动模式
- **运行时间：**100分钟
- **充电时间：**100分钟

质保

本产品自购买之日起保修期为1年，如产品遇到任何非人为的质量问题，请首先联系您购买产品的商家。