 
 


MyToys  
my toys, my joy!

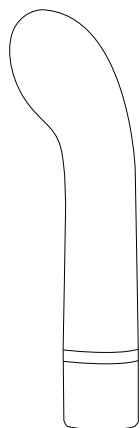

MyMini G – User Manual

## Getting to know MyMini G

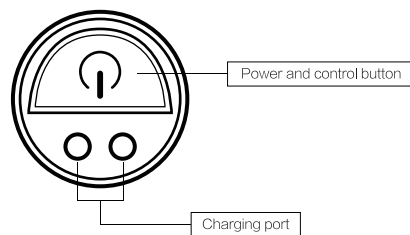

### Features

- Discreet G-spot vibrator with powerful vibrations
- Powerful motor for deep and strong vibrations
- Chose from 3 vibration levels and 4 thrilling patterns
- Super silky medical-grade silicone surface
- Both functions can be separately controlled
- Splashproof (IPX6)
- Rechargeable, USB charging cable included

 
### Operation

#### 1. Charging

Please fully charge for around 120 minutes before first use.

LED flashes white: charging

LED lights on: fully charged

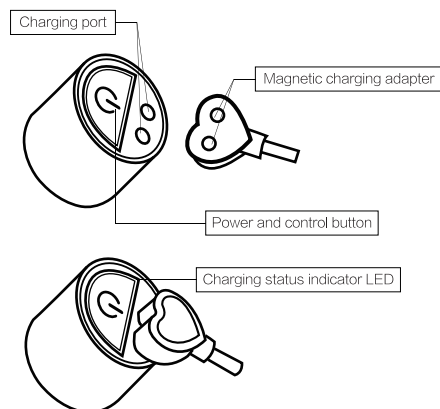

## 2. How to use

#### Turn on / off:

Please press and hold the power and control button for 3 seconds, until the button lights. Please repeat the same operation to switch off the product

#### Change the different vibrations:

Please shortly click the same button to cycle through 7 vibration modes (3 vibration levels and 4 different patterns).

 
## Specification

- Material: Body-safe silicone and ABS with smooth surface
- Size: 125mm x 27 mm
- Vibration Modes: 7
- Operation time: 60 minutes
- Charging time: 2 hours
- Noise: 50dB

## Care and Guarantee

For the most pleasurable sensation, apply some water-based lubricant to your body and to MyMini G before and during use. After use, please rinse it with water and soap (it is splash proof) and keep it afterwards in a dry and cool place. The product is guaranteed for 1 year from the date of purchase. If you experience problems, please contact the vendor you bought the product from.

## 中文

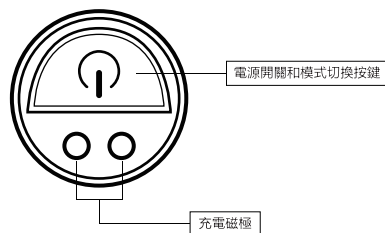

### 特點

- 迷人的造型，強勁G點震動棒
- 深層強勁的震動力
- 3種震動速度，4種震動模式
- 絲滑觸感，柔軟矽膠材質
- IPX6級防水
- 磁吸充電設計，內含USB線

 
### 操作方法

#### 1. 充電

首次使用前，請充電120分鐘

LED燈閃爍白燈：充電中

LED燈常亮：充電完成

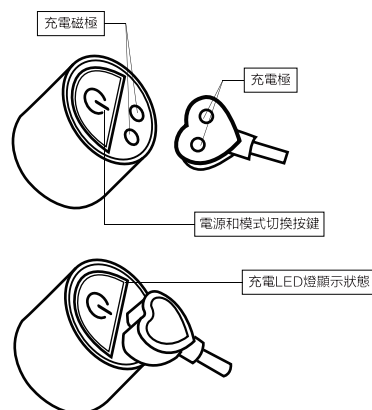

## 2. 開始使用

#### 開關機：

請長按3秒，產品開在第一速啟動，同時白色LED燈亮。產品工作狀態下，長按3秒，產品停止工作，同時白色LED燈熄滅

#### 改變震動模式：

請短按電源按鍵切換7種震動模式（前三種是震動速度的變化，後面4種是模式的變化）

## 規格

- 材質：矽膠，表面做了柔順處理
- 尺寸：125mm x 27 mm
- 震動模式：7
- 運行時間：60分鐘
- 充電時間：2小時
- 防水等級：IPX6
- 噪音：50dB

## 護理和質保

為了更好體驗，請塗抹一些水基潤滑液在身體和產品上。使用後，請使用水或者肥皂進行沖洗，再可以使用玩具噴霧進行消毒，沖洗乾淨後將產品置於陰涼乾燥處。本產品自購買之日起保修期為1年，如有遇到問題，請首先聯繫您購買產品的商家。